


Barneveld, Netherlands Phone: + 31 6 51920965 E-mail: info@comfychair.nl

Website: www.comfychair.nl

PACKAGE CONTENT

Wood Folding Chair FCC 200



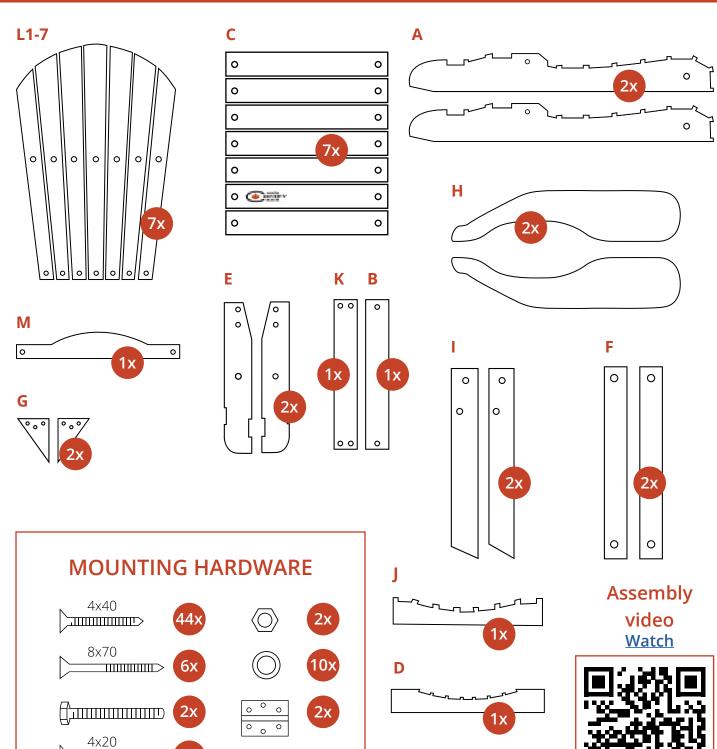



ASSEMBLY INSTRUCTIONS


Wood Folding Chair FCC 200






Before you start

- Carefully unpack the package and check if all components are present.
- Required for assembly: cordless drill, hammer and an wrench 13. The bit for the drill machine is included in the bag of screws.
- For the FCC 200, all fixing points with screws (4x20 and 4x40) should be **glued** using the wood construction glue provided for extra stability. One tube of glue is enough for three pieces of furniture.
- Due to the drying of the glue you can only coat the chair with oil after assembling it.

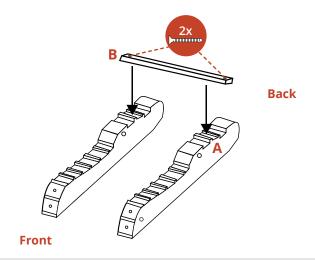

Step 1 | Crossbar B

- Position side pieces A with the curved sides up on a flat surface. Make sure the countersunk sides of the pre-drilled holes face outward.
- Insert crossbar B at the back of A into the middle notch, between the two deeper notches, with the countersunk holes facing up.
- Screw B to A with a 4x40 mm screw on each side.

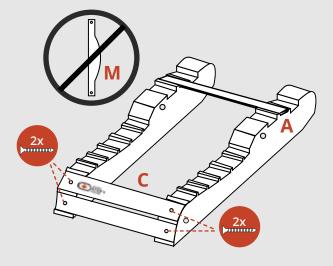

Step 2 | Seat slats


- Place the seat slats C in the notches on the front of A, with the countersunk screw holes facing up.
 Make sure that the outermost edges of the slats are precisely aligned with the outermost edges of the notches.
- Insert the slat with the logo into the second notch from the bottom.
- Secure the slats C with a 4x40 mm screw on both sides.
- **Caution:** do not attach part M yet.



ASSEMBLY INSTRUCTIONS


Wood Folding Chair FCC 200



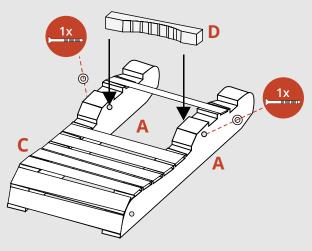


Step 3 | Low back support

- Take two washers and two 8x70 mm screws. Slide a washer over each screw.
- Take low back support D and place it in the center of side pieces A.
- Insert the screws through the large holes on the back of the parts A, from the outside to the inside.
- Attach D with the screws and make sure the plank fits perfectly.
- **Caution**: do not tighten D too tightly. The plank must be able to be rotated.

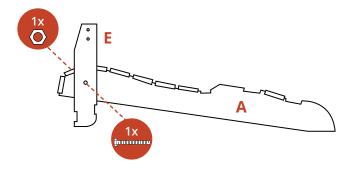

Step 4 | Chair legs

- Place chair leg E against side piece A, with the slanted edge facing forward and the countersunk holes facing inward.
- Insert a bolt + washer from the outside into chair leg E, through the large hole in side piece A.
 Tighten it from the inside with a nut + washer.
- Repeat these steps on the other side of the chair.

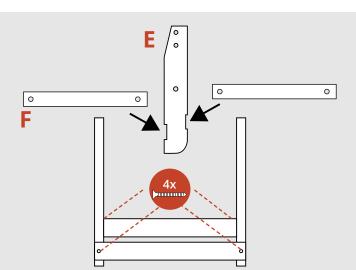

Step 5 | Cross boards F


- Grab cross boards F. These will be fastened underneath the chair legs E.
- Place a board F in the notch on the front edges of E. Make sure the countersunk holes face forward.
 Screw F in place with a 4x40 mm screw on both sides
- Repeat this step with the other board F on the back of chair legs E.



ASSEMBLY INSTRUCTIONS


Wood Folding Chair FCC 200



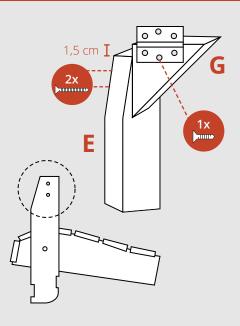


Step 6 | Armrest carrier

- Fasten triangle G on chair leg E. The triangle extends 1.5 cm above E. The three marking points on G should face forward.
- Screw down triangle G with two 4x40 mm screws. Use the two marking holes on the side of G as reference points.
- Take a hinge and attach it to G with one small 4x20 in the center hole.
- Repeat these steps on the other side of the chair.

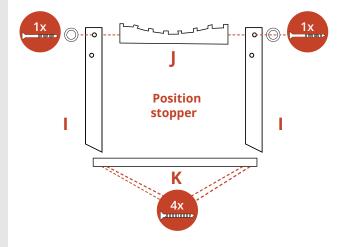

Step 7 | Assemble position stopper

- Gather parts I, J and K to make the position stopper.
- Position parts I to the left and right of the upper backrest I.
- Secure J by inserting an 8x70 screw + washer through the screw hole on top of I.
- **Caution**: do not overtighten, part J must remain movable.
- Place slat K at the bottom of parts I and fasten with two 4x40 mm screws on each side.

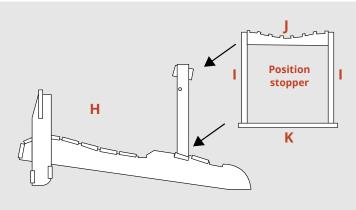

Step 8 | Instert the position stopper


- Hold the 'position stopper' facing the front of the reclining chair and set it upright into the last reclining position underneath the back legs.
 Caution: Slat K should fit perfectly in the notch for step 9.
- Rotate the upper backrest J until the notches are facing the front.



ASSEMBLY INSTRUCTIONS


Wood Folding Chair FCC 200



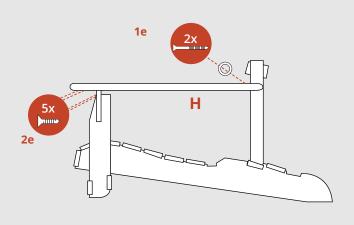


Step 9 | Armrest

- Take the end of the armrest (H) and secure it to the 'position stopper'. Use two 8x70 screws and slide a washer over each screw. Insert the screws from the inside through the remaining low holes on top of the armrest.
- Make sure that the front legs of the chair remain upright and put the position stopper in the first notch. Leaving the armrest resting on the armrest support.
- Secure the armrest hinge with five 4x20 screws (two under the triangle and three under the armrest).

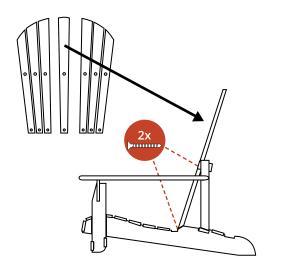

Step 10 | Center back slat

- Lay down the back slats L1-7 in the correct order, starting with the longest slat in the middle. The slats should form an arch at the top.
- Place the center slat in the center notch from D and J with the countersunk holes facing forward.
- Make sure the slat fits exactly into the notch and is parallel to the bottom of the low back board D.
- Attach the longest, middle slat to D and then to J with a 4x40 mm screw.

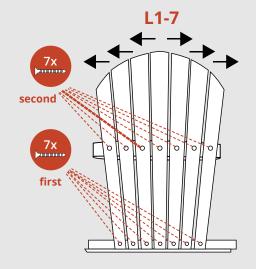

Step 11 | Back slats


- Place the remaining back slats in their proper places.
- Fasten the slats at the bottom with 4x40 mm screws.
- Make sure that the slats are properly located at the top and form a nice arch. The distance between the slats should be even. Use the notches as reference points.
- Fasten the slats at the top with 4x40 mm screws.



ASSEMBLY INSTRUCTIONS


Wood Folding Chair FCC 200



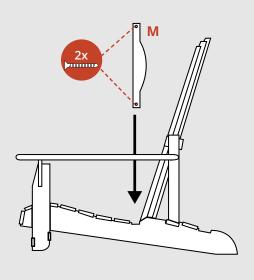


Step 12 | Slat M

- Insert slat M in the notches at the back of the seat, with the curved side facing back and the countersunk screw holes facing up.
- Secure M with a 4x40 mm screw on both sides.

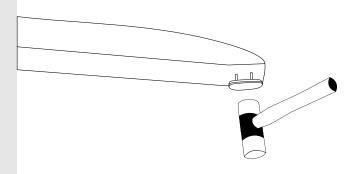

Step 13 | Furniture gliders

Use a hammer to attach the 4 furniture glides under the chair legs.

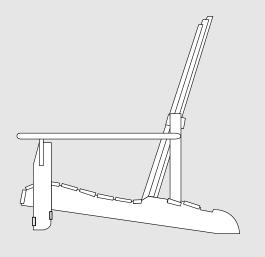

Finished!

After you're work is done, it's good to relax ... in your new Folding Chair FCC 200.

Enjoy!