
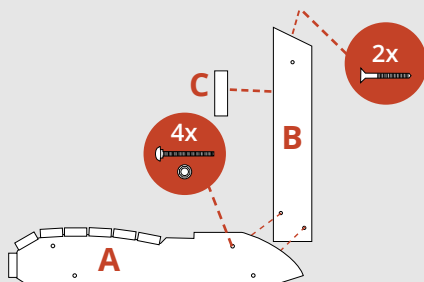


## ASSEMBLY INSTRUCTIONS

### Plastic Comfy CCC100

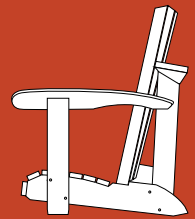


#### Step 1:

Attach the rear legs "B" to the inside of the seat "A" using the supplied carriage bolts.


**Tip:** Use a hammer (or other hard object) to "tap" the round head of the carriage bolt so that it does not rotate when the nut is screwed on.

Then slat "C" is mounted on the front of the hind legs on both sides, at the height of the pre-drilled hole and tight against the top of the backrest. (see step 3 for the location of batten "C").

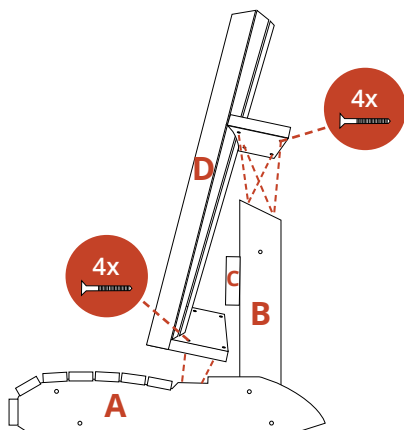

#### Step 2:

Then place the backrest "D" in the recess and first screw the top with 4 screws and then the bottom with 4 screws.

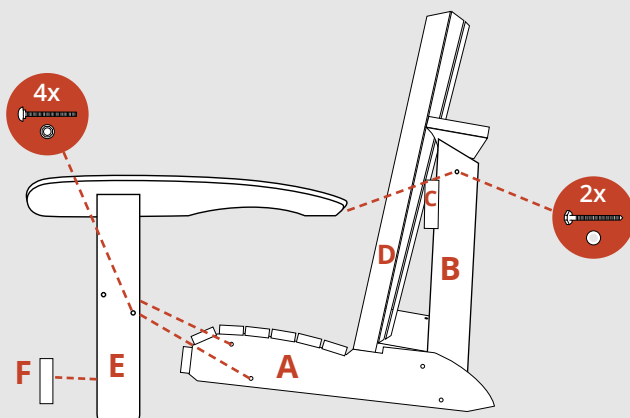

#### Step 3:

Place the chair on the side and mount the front legs "E" using the carriage bolts with nut. Then the handrail is secured by the large screws with washer.



Turn the chair on the other side and repeat step 3.

#### Step 4:

Mount slat "F" between the front legs.

## PACKAGE CONTENTS

Plastic  
Comfy CCC100

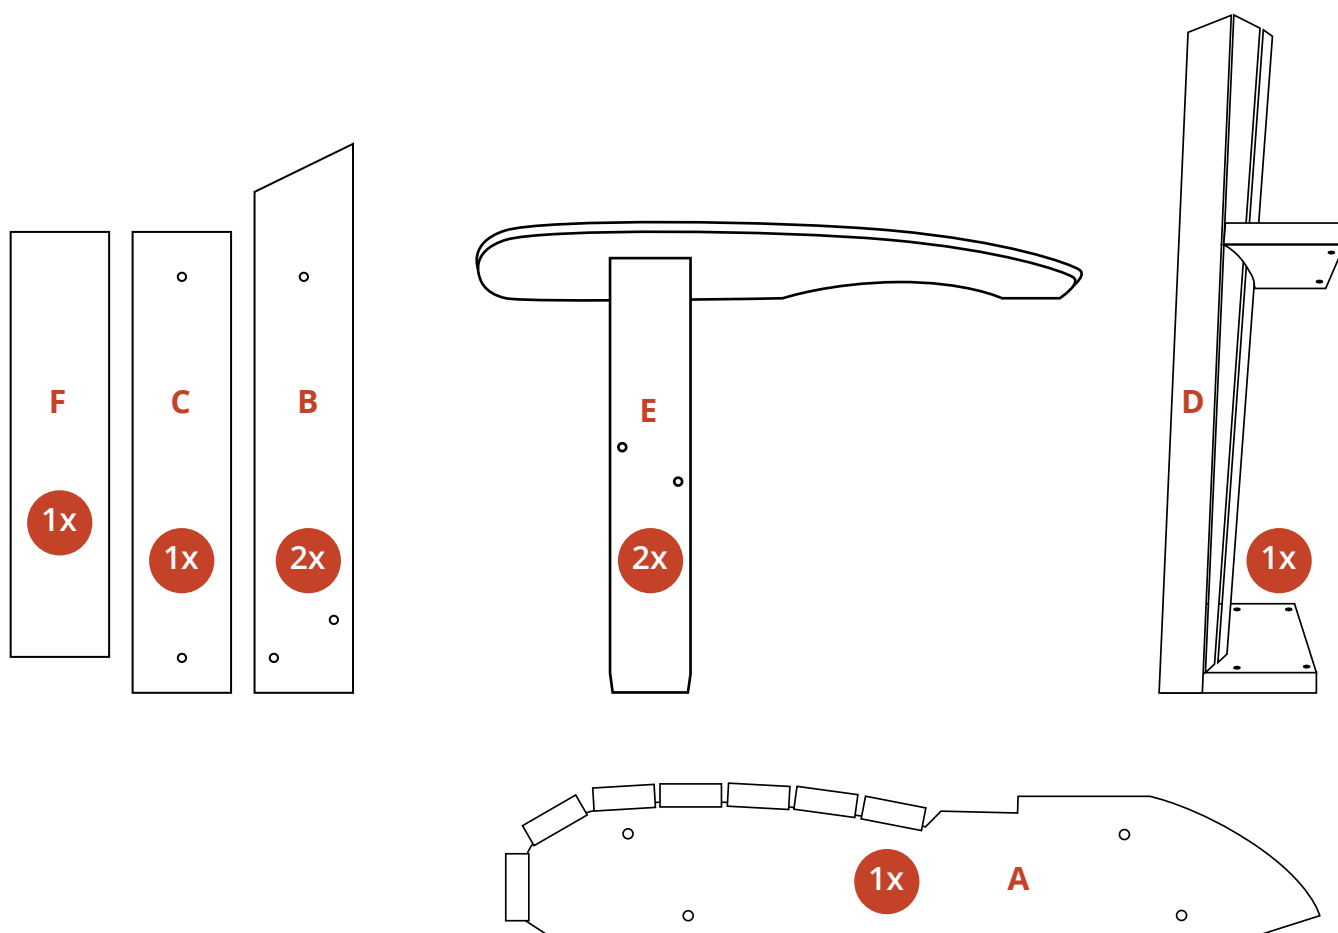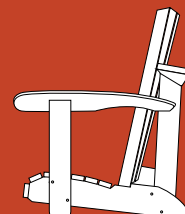

### FASTENING MATERIAL



8x



8x



2x



2x



12x