
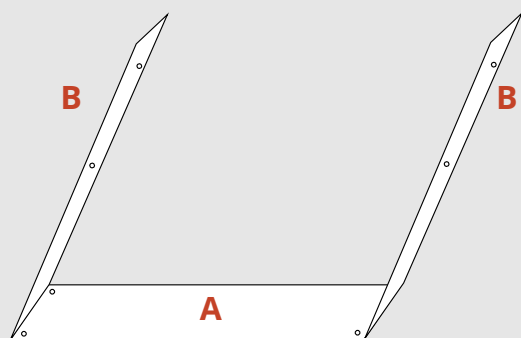



ASSEMBLY INSTRUCTIONS

Plastic
Comfy RCC200

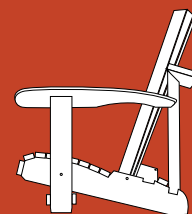

Step 1:


The stopper comes pre-assembled in the box.

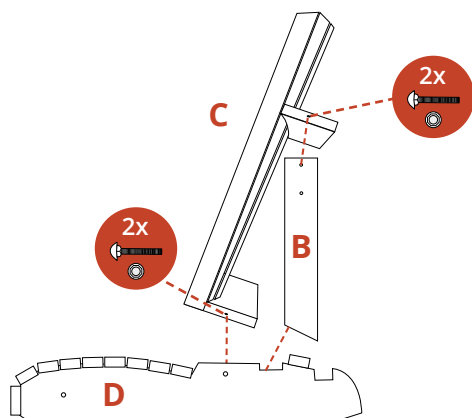

Step 2:

Now screw the backrest "C" to the underside of the beams "D" using the bolts and nuts. Tighten it so that the backrest remains in position (do not overtighten).

Then take the stopper and place it in the first recess and mount the stopper on the top of the backrest using the 2 bolts and nuts.

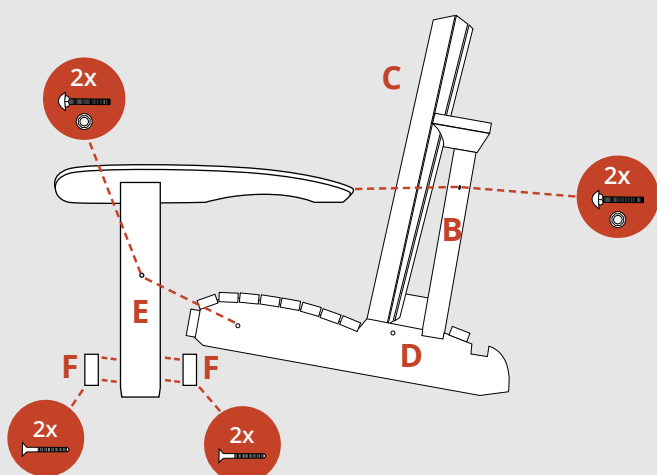

Step 3:

Place the chair on the side and tighten the legs and armrest "E". The legs by using the bolt with nut and washer and the handrail by using a large screw with washer.

Step 4:






Finally, the two slats "F" are mounted on the front of the chair, in the recesses.



Enjoy the outdoor life!

PACKAGE CONTENTS

Plastic
Comfy RCC200

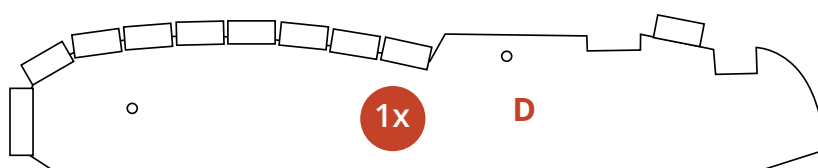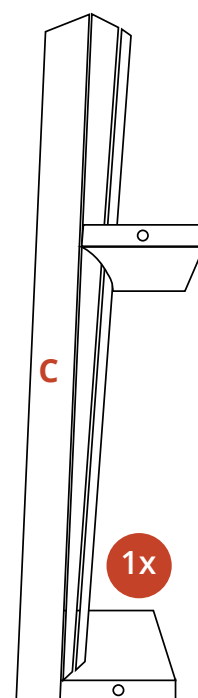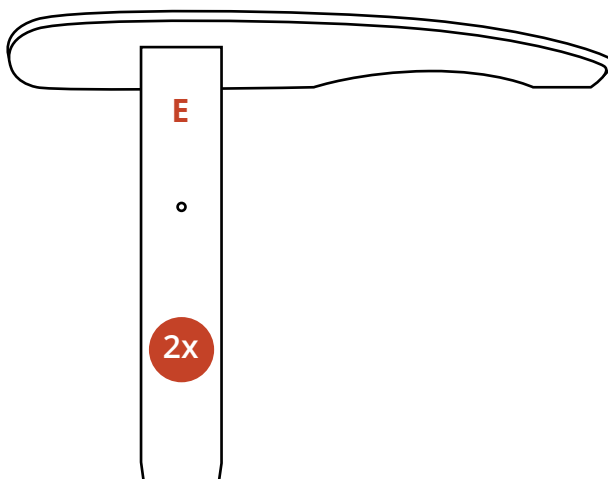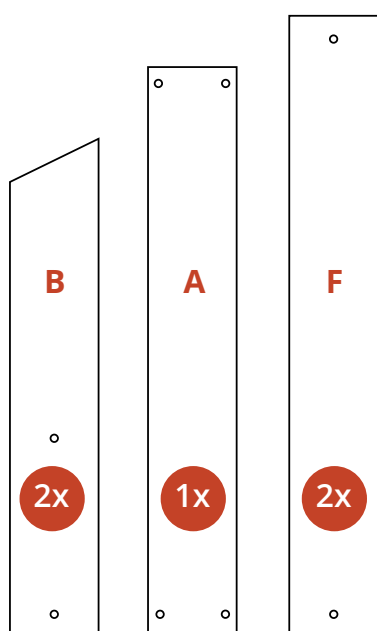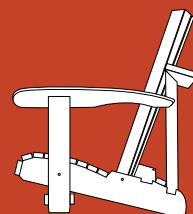

FASTENING MATERIAL



8x



8x



8x