


ASSEMBLY INSTRUCTIONS

Comfy Chair Tete-a-Tete Plastic

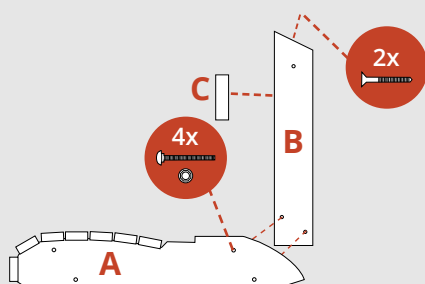


Step 1:

Attach the rear legs "B" to the inside of the seat "A" using the supplied carriage bolts.


Tip: Use a hammer (or other hard object) to "tap" the round head of the carriage bolt so that it does not rotate when the nut is screwed on.

Then slat "C" is mounted on the front of the hind legs on both sides, at the height of the pre-drilled hole and tight against the top of the backrest. (see step 3 for the location of batten "C").

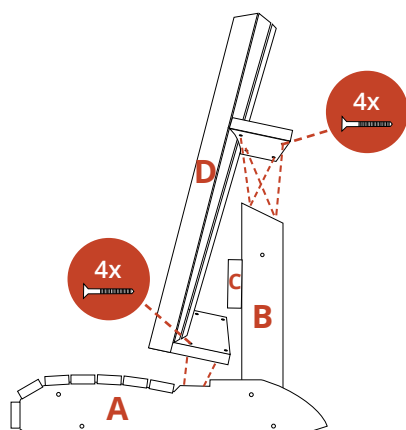

Step 2:

Then place the backrest "D" in the recess and first screw the bottom with 4 screws and then the top with 4 screws.

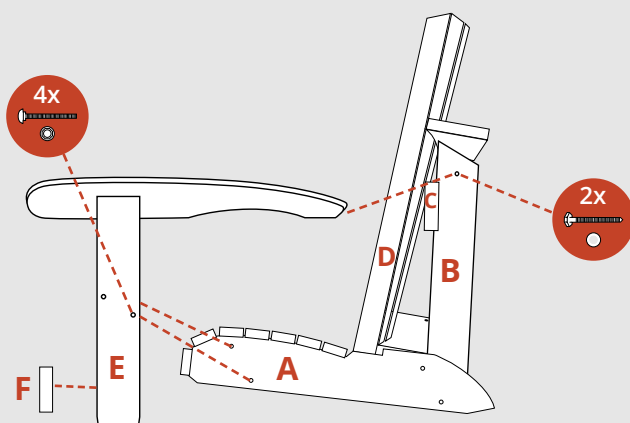

Step 3:


Place the chair on the side and mount the front legs "E" using the carriage bolts with nut. Then the handrail is secured by the large screws with washer.

Turn the chair on the other side and repeat step 3.

Step 4:


Mount slat "F" between the front legs.

ASSEMBLY INSTRUCTIONS

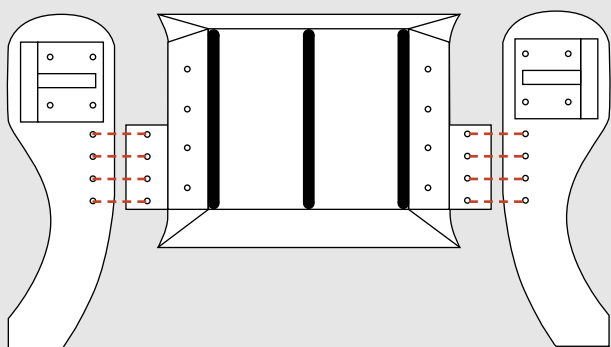


Step 5:

Place the two chairs on a flat surface. Then put the small table top on top in the curve of the backrest and screw it to the back of the chair at the bottom.

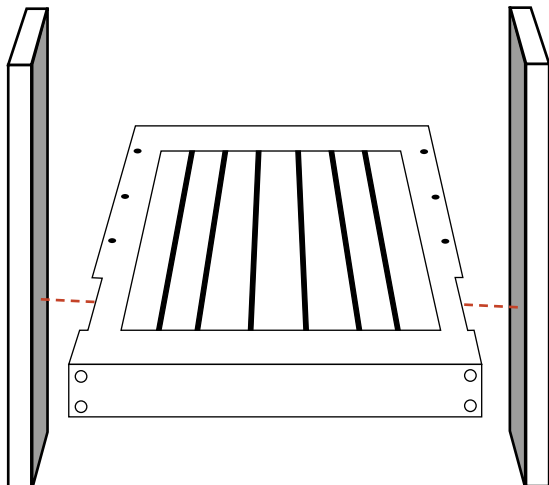

Step 6:

Then lay the tabletop bottom with the hole in the front legs. Make sure the back of the table top is flush with the top of the curved slat.

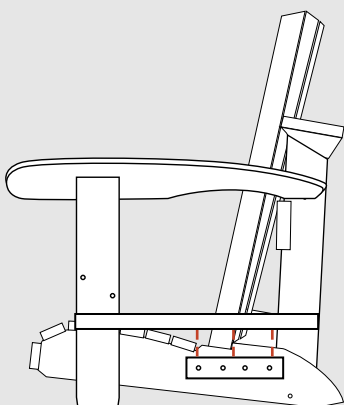

Step 7:

Screw the assembly to the side of the seat.

PACKAGE CONTENTS

