



## PACKAGE CONTENT


Wood  
Dining Chair  
CDC 800

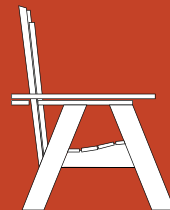


**L1-7**

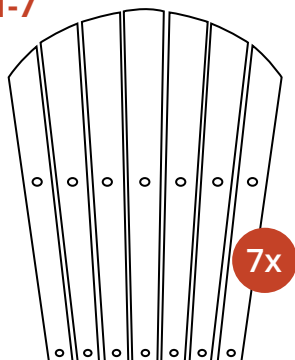


**D**

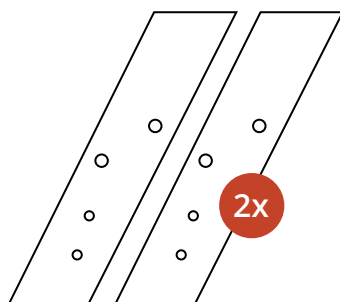


**E**

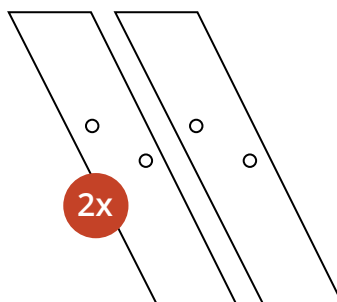


**G**

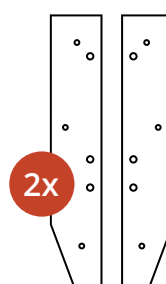

**C**

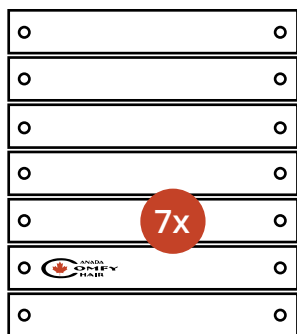

**H**

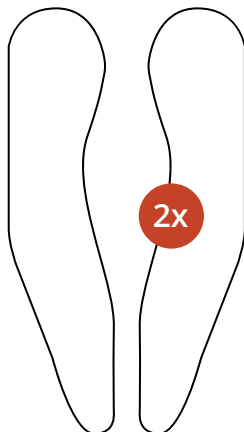

**I**



**A**




**2x**

**B**



**1x**

**F**



**1x**

### FASTENERS



**28x**




**8x**



**8x**




**16x**



**24x**


### ASSEMBLY VIDEO

[Watch the video](#)

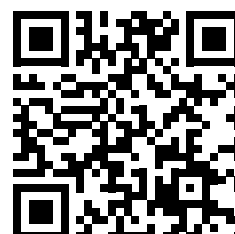


## ASSEMBLY INSTRUCTIONS

Wood  
Dining Chair  
CDC 800

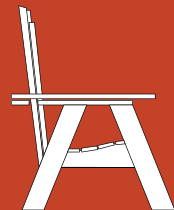


### Before you start

- Carefully unpack the package and check if all components are present.
- Required for assembly: cordless drill, hammer and an wrench 13. The bit for the drill machine is included in the bag of screws.
- We recommend that all fixing points will be **glued** with the provided wood construction glue. One tube of glue is sufficient for three chairs.
- Due to the drying of the glue you can only coat the chair with oil after assembling it.

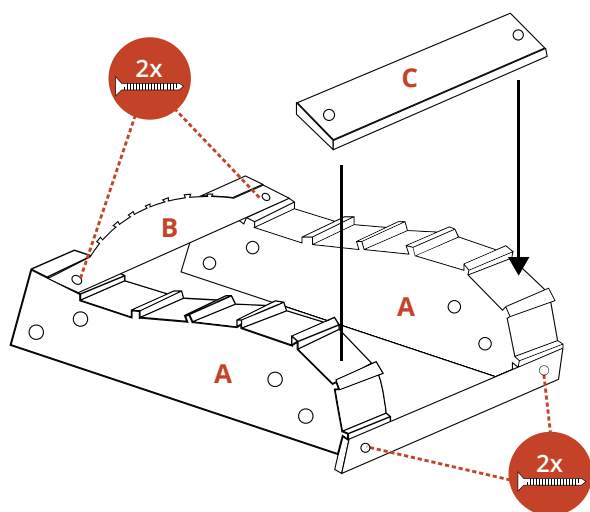

### Step 1 | Side pieces

- Place side pieces A on a flat surface with the curved sides up.
- Insert slat B into the last notches on the back of sidepieces A, with the curved side facing back and the countersunk holes facing up. Ensure that the outer edges of B are aligned with the outer edges of A.
- Secure B with a 4x40 mm screw on each side.
- Take one of the C slats and place it in the first notches at the front of the sidepieces. Secure the slat with a 4x40 mm screw on each side.
- Place one C slat in the third notch down and attach


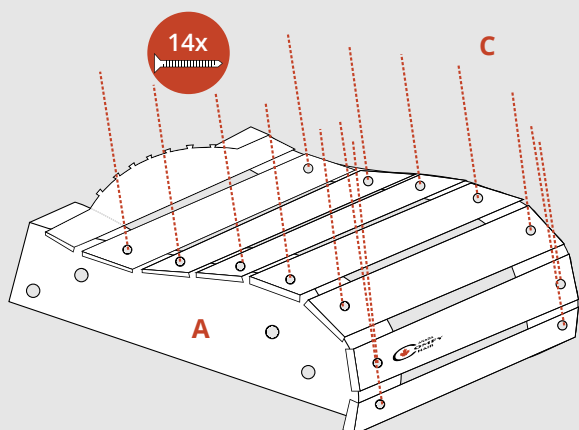


### Step 2 | Seat slats

- Place the remaining slats C in the remaining notches on top of sidepieces A. The outermost edges of the slats should be aligned with the outermost edges of the notches. The countersunk holes need to be facing up.
- Place the slat with the logo in the second cutout from below.
- Attach the slats with 4x40 mm screws.


## ASSEMBLY INSTRUCTIONS

Wood  
Dining Chair  
CDC 800

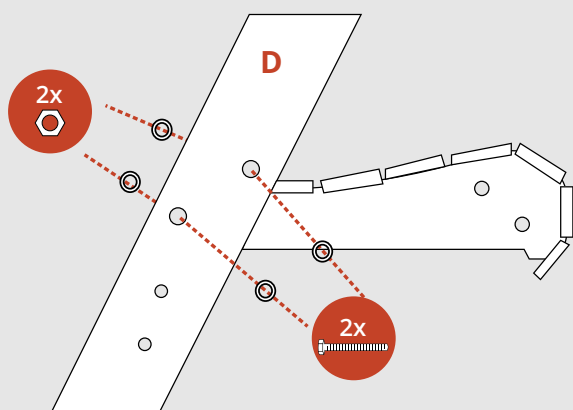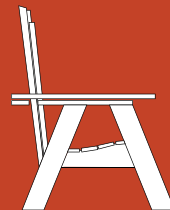


### Step 3 | Rear seat legs

- Place one back leg D with the large screw holes against the back of side piece A. The small screw holes should be at the bottom of the leg, with the countersunk side facing out.
- Insert two bolts + washers through the large pre-drilled holes in D and A. Fasten them on the inside with two nuts + washers.
- Repeat these steps on the other side of the chair.
- Place slat F between the back legs and fasten with two 4x40 mm screws on each side in the smaller screw holes.

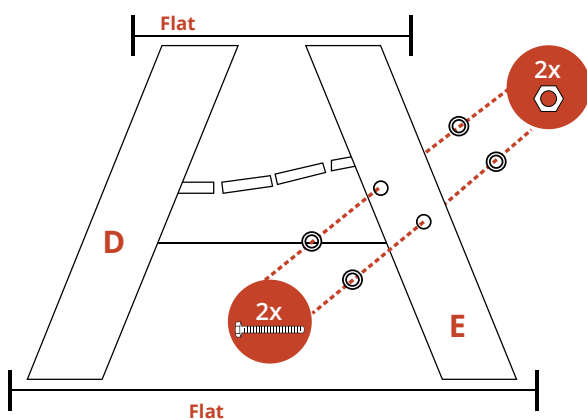

### Step 4 | Front seating legs

- Place a front leg E against the front of side piece A.
- Insert two bolts + washers through the large pre-drilled holes in D and A.
- Fasten them on the inside with two nuts + washers.
- Repeat these steps on the other side of the chair.
- **Important:** balance the chair. Move it forwards and backwards until it is standing steady and the top and bottom of the front and back legs are flush.


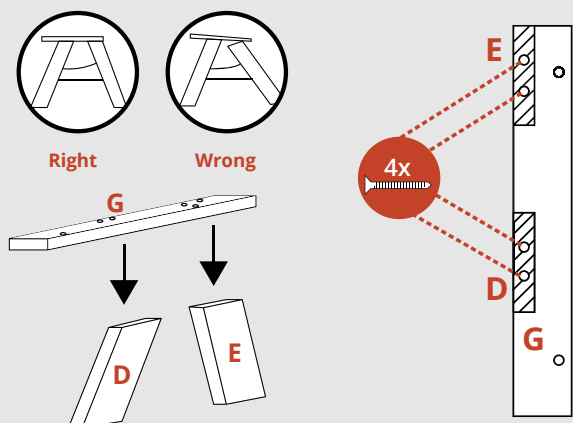


### Step 5 | Armrest carrier

- Place armrest carrier G on top of chair legs E and D, with the four countersunk holes facing up. Make sure that the innermost edge is parallel to the innermost edge at the top of the legs. Align the front edge of G with the front edge of front leg E.
- Secure G to E and D with four 4x40 mm screws from the top.
- Repeat these steps on the other side of the chair.


## ASSEMBLY INSTRUCTIONS

Wood  
Dining Chair  
CDC 800

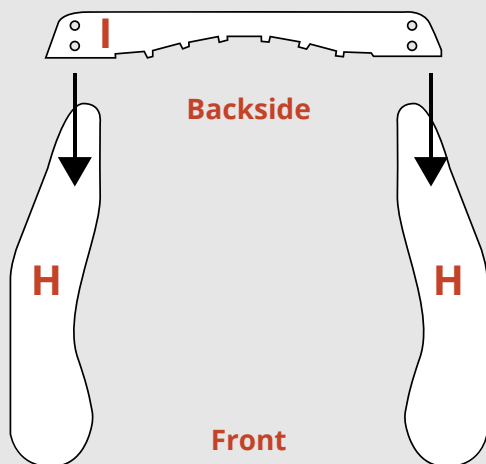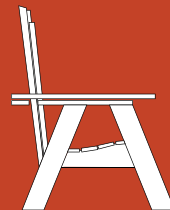


### Step 6 | Armrest construction

- Take the two armrests H and the high back support I to make the armrest construction. Lay armrests H upside down on a flat surface, with the curved sides facing each other.
- Place I precisely on top of the rear end of the armrests, with the countersunk holes facing up.

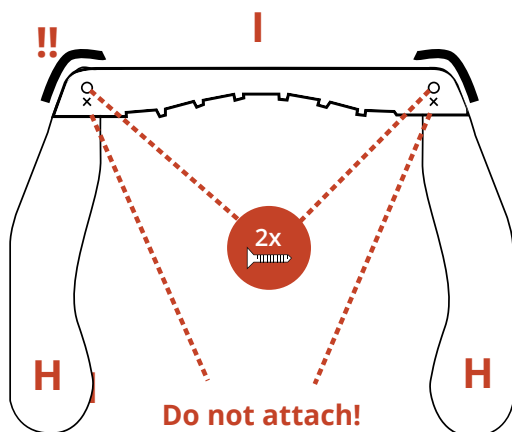

### Step 7 | Armrest construction

- Attach I with one 4x30 mm screw on each side in the first screw hole.
- **Note:** do not use the other screw holes!
- Make sure the armrest alligns with back support I. Rotate the armrests to the left or right until the edges form a curved line.


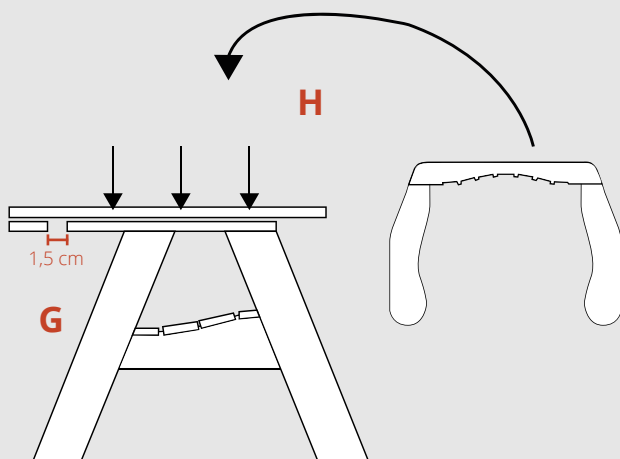


### Step 8 | Armrests

- Turn the armrestconstruction over and place it on top of the armrest supports G. Make sure:
- Armrests H lie straight;
- The inner curved edges of H are aligned with the edge of G;
- Back support I protrudes 1,5 cm beyond G.


## ASSEMBLY INSTRUCTIONS

Wood  
Dining Chair  
CDC 800

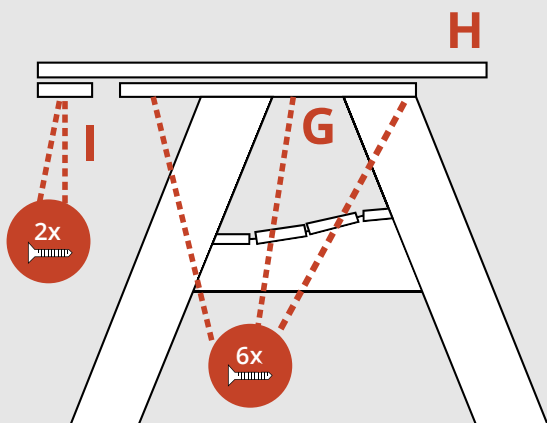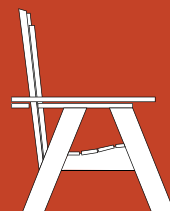


### Step 9 | Securing armrests

- Screw two 4x30 mm screws into the remaining holes of back support I.
- Screw three 4x30 mm screws from below through the armrest G into the armrest H.
- Repeat these steps on the other side of the chair.

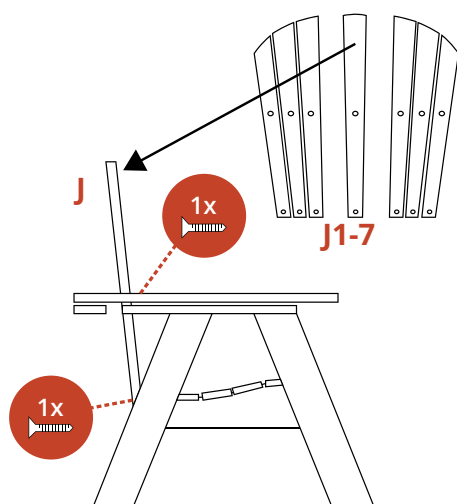

### Step 10 | Back slats

- Arrange the back slats J1-7 in the correct order, starting with the longest slat in the middle. The slats should form an arch at the top.
- Place the middle slat in the middle notch from the back supports B and I.
- Make sure the underside of the slat aligns with the edge of the low back support.
- Secure the slat with two 4x30 mm screws. Screw at the bottom from the outside and at the top from the inside.


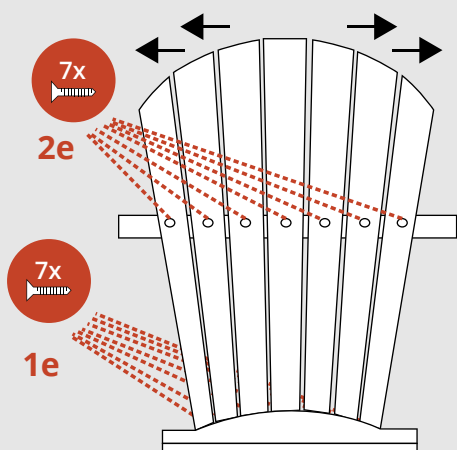


### Step 11 | Back slats

- Place the remaining back slats in their proper places.
- Secure the slats at the bottom with 4x30 mm screws.
- Make sure that the slats at the top form a nice arc. The distance between the slats should be even. Use the notches as references.
- Secure the slats at the top with 4x30 mm screws.


## ASSEMBLY INSTRUCTIONS

Wood  
Dining Chair  
CDC 800

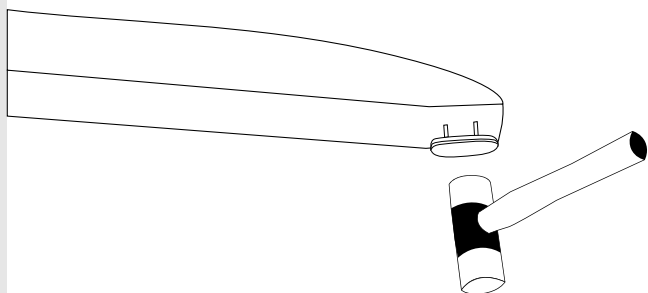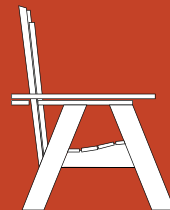

### Step 12: Furniture gliders

Use a hammer to attach the 4 furniture gliders under the chair legs.

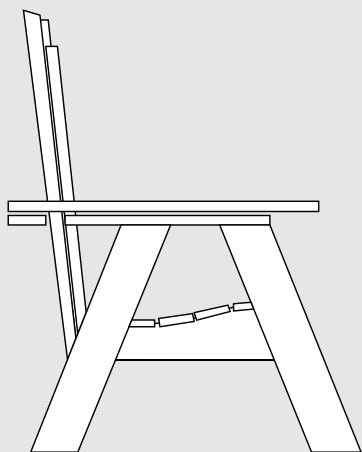

### Done!

After your work is done, it's good to relax... in your new Dining Chair CDC 800.

Enjoy!