


PACKAGE CONTENT


Wood
Foot Stool
CFO 500

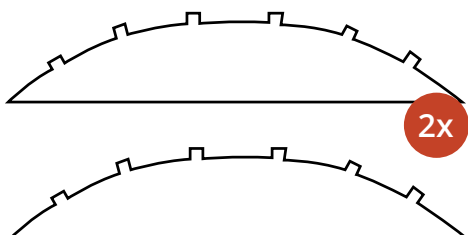


A




F

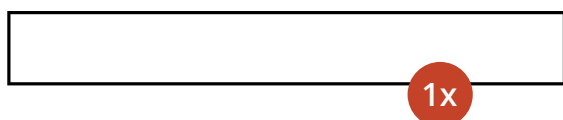


E

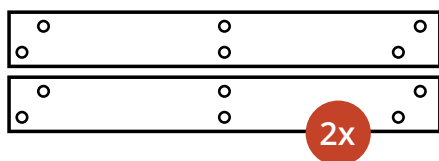


B

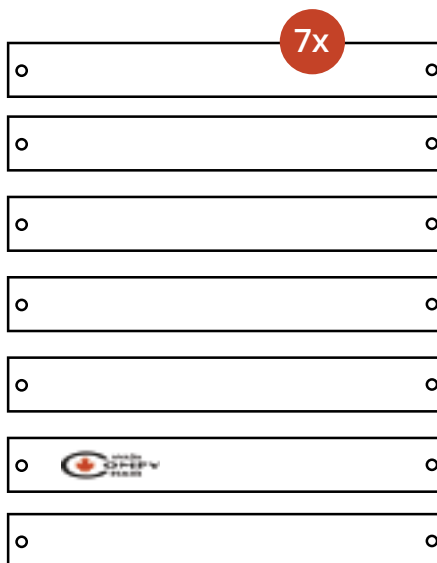

C

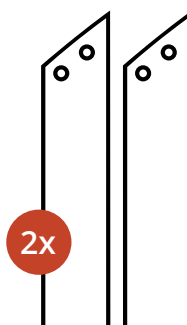

D

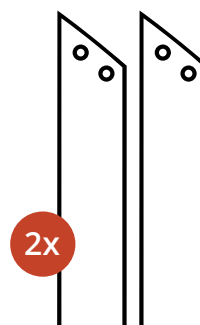

MOUNTING HARDWARE




14x



20x

ASSEMBLY VIDEO

[Watch the video](#)

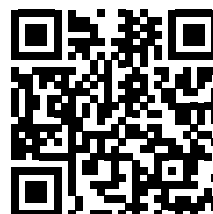


ASSEMBLY INSTRUCTIONS

Wood
Foot Stool
CFO 500




Before you start

- Carefully unpack the package and check if all components are present.
- Required for assembly: cordless drill and hammer. The bit for the drill machine is included in the bag of screws.
- We recommend that all fixing points will be **glued** with the provided wood construction glue. One tube of glue is sufficient for three chairs.
- Due to the drying of the glue you can only coat the foot stool with oil after assembling it.

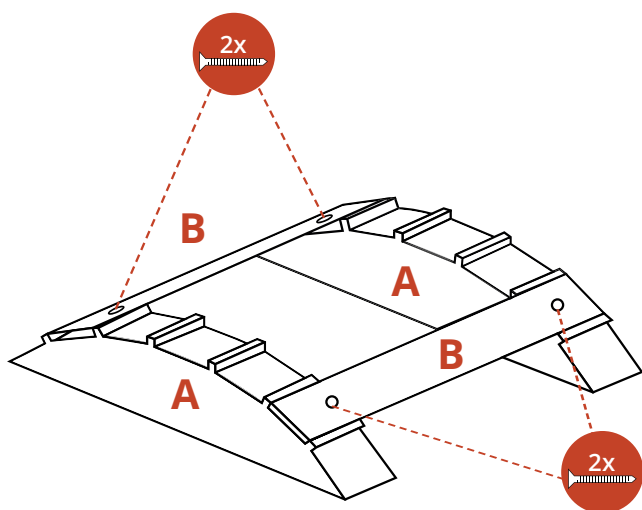

Step 1 | The first slats

- **Pay attention:** there are two lengths of screws.
- Place the two round parts A on a flat surface, with the notches facing up.
- Place one of the slats B in the second notch from below, with the countersunk holes facing up. The slat should fit perfectly into the notches and the outside of the slat should be aligned with the outside of the notches.
- Secure the slat with a 4x40 mm screw on each side.
- Secure slat B (with the logo) on the other side of the footstool in the same way, also in the second notch from the bottom.

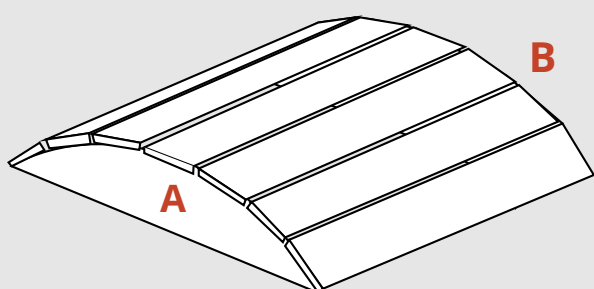


Step 2 | The remaining slats

- Place the three slats B in the notches at the top of the footstool and secure with 4x40 mm screws (the large ones).
- Place the last two slats B in the two lower notches of the footstool and secure with 4x30 mm screws (the small ones).


ASSEMBLY INSTRUCTIONS

Wood
Foot Stool
CFO 500

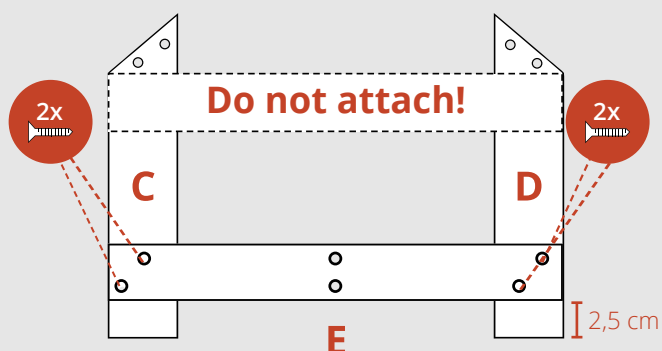


Step 3 | Leg 1

- Place one slat C and one slat D on a flat surface with the countersunk holes facing down.
- Place one slat E 2.5 cm from the bottom on top of C and D, with the countersunk holes facing up. The outermost edges of slat E should be aligned with the outside edge of C and D.
- Fasten E with two 4x30 mm screws on each side.
- **Tip:** To assemble at right angles, you can use the second batten E as an aid. Do not attach!

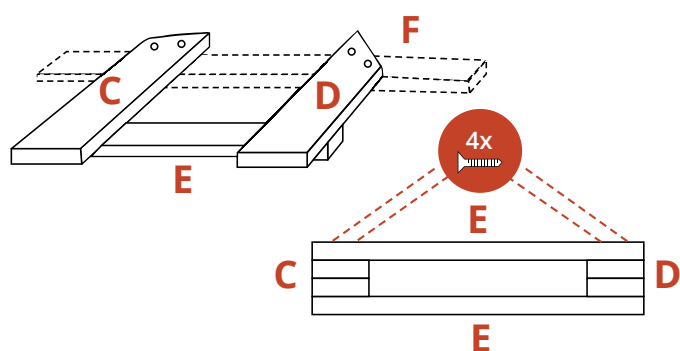

Step 4 | Leg 2

- Turn the assembled part over. Slat (E) (that is already assembled) should be facing downwards. Use slat F to make sure the assembly part lies flat.
- Place the remaining slats C and D on top of the assembled part, with the countersunk holes facing down.
- Place the remaining slat E on top of C and D, with the countersunk holes facing up. Assemble the boards exactly the same as the mounted part. Make sure that the distance from slat (E) is also about 2.5 cm from the bottom.
- Secure E with two 4x30 mm screws on each side.

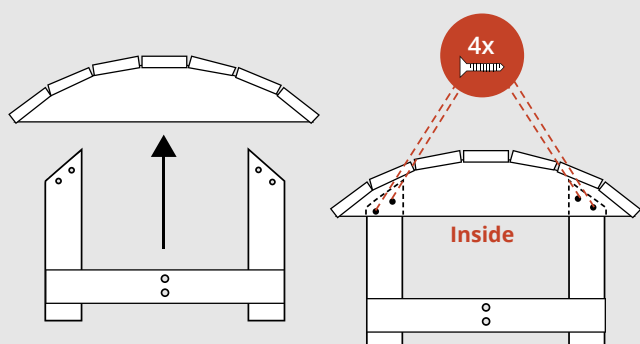


Step 5 | Mounting table legs

Take both assembled legs and attach them to the inside of the footstool with four 4x30mm screws on each side.


ASSEMBLY INSTRUCTIONS

Wood
Foot Stool
CFO 500

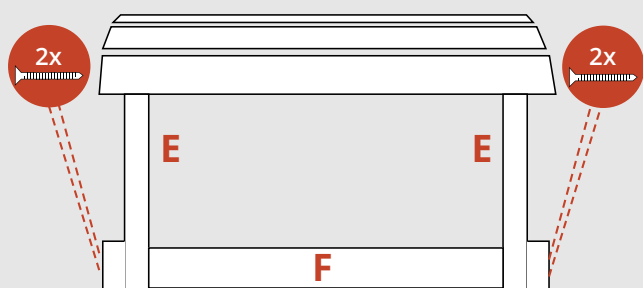

Step 6 | Slat F

Place slat F in the middle of the slats E and secure it from the outside through the slats E with two 4x40 mm screws on each side.

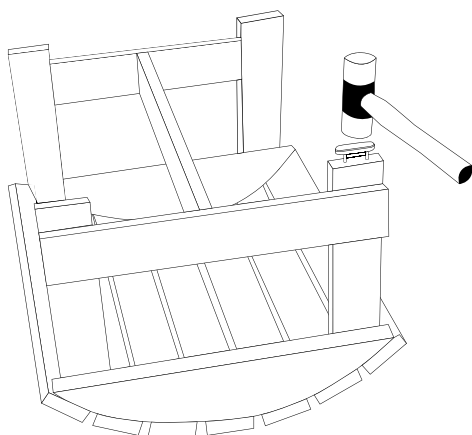

Step 7 | Furniture gliders

Use a hammer to attach the 4 furniture gliders under the foot stool legs.



Finished!

Enjoy your Foot Stool CFO 500!