



CONTENTS OF PACKAGES A+B

Plastic
Comfy CCC100

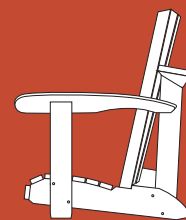


BOX A


A | SEAT

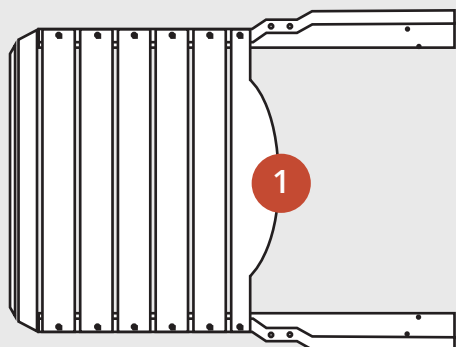

E1 | FRONT LEGS

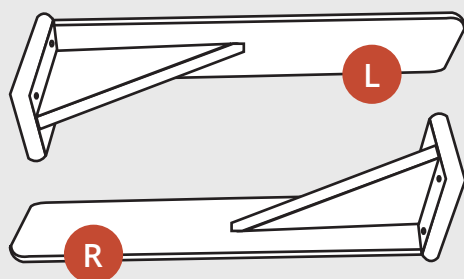


E2 | ARMRESTS

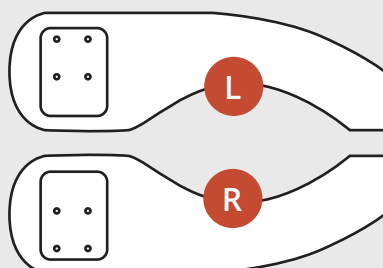


BOX B


C | BACK SUPPORT SLAT

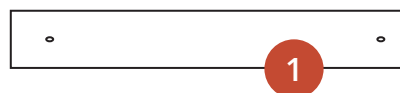


B | REAR LEGS

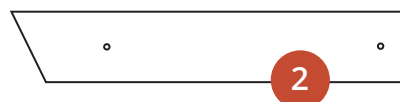


F | FRONT CROSSBAR

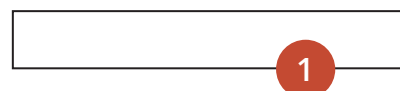

D | BACKREST

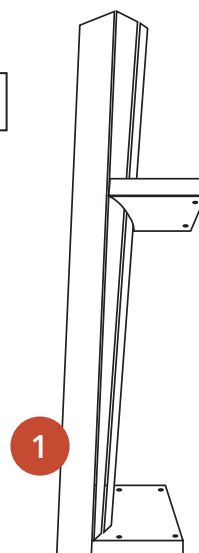


FASTENING MATERIALS

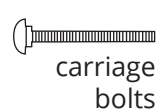

8



8

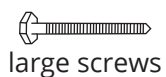

2



2





20

small screws

ASSEMBLY INSTRUCTIONS

Plastic
Comfy CCC100

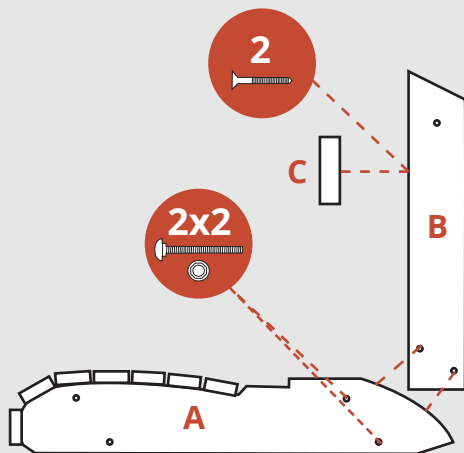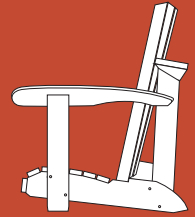


Before you begin

Check if you have received all components. The components are supplied in **two boxes** (A and B).


Step 1 | Rear legs and support bar B

- Take **seat A** and one **rear leg B**, and position B on the inside of A.
- Take two carriage bolts and insert them through the pre-drilled holes from the outside of A. Tighten the nuts onto the bolts. **Tip:** Tap the rounded head of the carriage bolts with a hammer or another hard object. This will prevent the bolt from turning while the nut is being tightened.
- Repeat these steps on the other side of the chair.
- Take **support bar C** and position it at the front of the rear legs, in line with the pre-drilled holes. Secure C with two small screws.

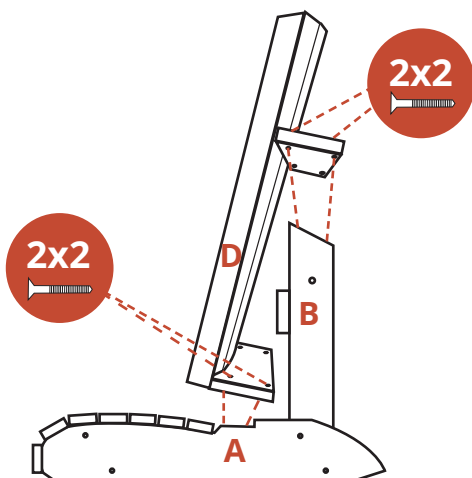

Step 2 | Backrest

- Take **backrest D** and place it in the recess in the seat.
- First secure the top of D to rear legs B using four small screws, two on each side.
- Then secure the bottom of D to seat A using four small screws.


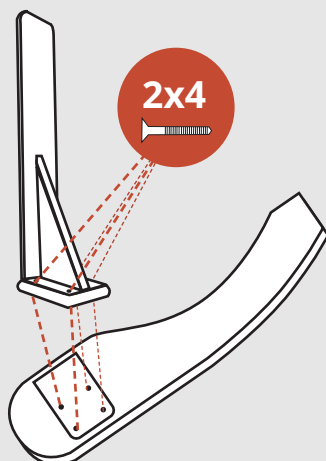


Step 3 | Armrests

- Take the armrest components, **E1 and E2**.
- Match the correct chair leg E1 with the correct armrest E2. Use the recess in the armrest to identify the correct combination. Note the rounded and straight corners in the recess. These correspond to the shape of chair leg E1. The triangle must point outwards.
- Secure the chair leg to the armrest using four small screws..

ASSEMBLY INSTRUCTIONS

Plastic
Comfy CCC100

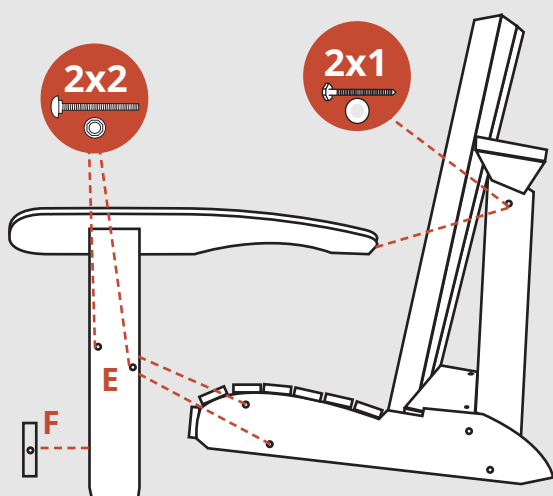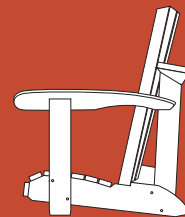

Step 4 | Attaching the front legs and crossbar F

- Lay the chair on its side and take one **front leg E**.
- Attach chair leg E using two carriage bolts and nuts.
- Now attach the armrest to the chair using one large screw and a washer.
- Repeat this on the other side of the chair.
- Install **crossbar F** between the front legs.

Finished!

We hope you enjoy your Comfy Chairs!